

Technical Data Sheet



Low Suds Automatic

BAR GLASS DETERGENT

For Electric Brushes and Automatic Glasswashers

The professional's choice for manually washing all types of glassware in bars, taverns and other foodservice glass washing operations. Contains special low foaming surfactants, descaling and sheeting agents for complete, spot-free cleaning of glassware. Ideal for use with automatic bar glass washers with electric brushes. Will not foam excessively.

Directions for Use

For a standard 3 gallon sink, fill first sink with clean, warm water up to approximately 1" from top of brushes. Add 2-4 ounces of this product into first sink. Turn on automatic brushes to agitate solution. Press glassware onto spinning brushes, making sure to penetrate as deeply as possible into bottom of glass to maximize cleaning. Also make sure that the rim of the glass comes into contact with the brushes to remove lipstick marks. Rinse glass in clean running water in second sink to remove detergent residue followed by an immersion in a sanitizing solution in the third sink. Drain glassware upside down on corrugated drain board to improve air flow and facilitate drying. Do not dry glassware with a towel, which can transfer germs and leave lint on the glass. Do not drain glassware on towel or rubber drain pad. Recharge first sink with water and new detergent once daily or when solution becomes visibly soiled.

Safety Reminder

Consult product label and Safety Data Sheet (SDS) before use. SDS's can be downloaded from www.crown-chem.com.



Technical Specifications

Appearance
Odor
pH (1% solution, 22°C)
Foaming
Flash Point
Density (lbs/gal, 22°C)
Stability Range
Alkalinity (as Na₂O)
Solubility (in H₂O, 22°C)
Phosphate Content (as P)

Product Number

18041

Green Liquid Characteristic <4.0 Low None 8.42 ±0.1 40-100°F None 100% None

Packaging

4x1 gal. case



